




## Machine operation

Additional information (including troubleshooting and service) can be found in the individual chapters of the instructions for use.

**Sort laundry according to care symbols:**

-  Do not tumble dry
-  Suitable for tumble drying - at low drying temperature
-  Suitable for tumble drying

Sort by:

**Material thickness:** Whenever there is greater load than the dryer can handle, separate laundry according to weight (e.g. dry towels and thin underwear separately).

**Type of material:** Cotton (linen); synthetic textiles (easy care).

**Degree of drying:** Cupboard dry, iron dry etc.

**Do not tumble dry:** Woollens, silk, nylon stockings, delicate embroidery, fabrics with metallic decorations, bulky items such as sleeping bags, etc.

### Preparing laundry

Check that all fastenings are closed and that pockets are empty. Please ensure that there are no cigarette lighters in the wash. Turn laundry inside out.

### Opening door

Pull the door handle.

### Loading dryer

Place laundry loosely in the drum to achieve equal drying throughout. Then close the door.

### Selecting programme

Select the drying programme required by turning the programme selector knob (for information, refer to programme table).

### Selecting options (if available)

Select the option required by pressing the corresponding button. The indicator lamp above the relevant button lights up to confirm your selection. A fast blinking led indicates a wrong selection is made (incompatible options). Press the button again to cancel the option.

### Starting dryer

The drying programme is started by pressing the "Start (Pause)" button. The relevant indicator lamp lights up.

**Changing programme selection:** If the programme selected is changed during drying, the dryer stops. The Drying indicator lamps flashes. To operate the new programme, again press the "Start (Pause)" button.

**Interrupting programme:** To interrupt the dryer during the drying cycle, set the programme selector knob to "Airing" "I" and press the "Start (Pause)" button. Wait at least 5 minutes before opening the door to allow the dryer to cool down. For your safety the drying cycle stops automatically if you open the door. To restart, after door opening, close the door and press the "Start (Pause)" button again.

**Warning:** Never stop a tumble dryer before the end of the drying cycle, unless all items are quickly removed and spread out so that the heat is dissipated.

### Programme end - unloading dryer

The final part of a tumble dryer cycle occurs without heat (cool down cycle) to ensure that the items are left at a temperature that ensures that the items will not be damaged.

● End

**End:** Take the laundry out of the dryer. The drying process is complete and the anti-crease phase has been reached (active).



 




 

 




 



**Anti-Crease:** If the laundry is not removed at the end of the drying cycle, an automatic anti-crease cycle will operate for maximum 60 min. The drum rotates at regular intervals to prevent the laundry from creasing.

### Switching dryer off

Set the programme selector knob to "Off" "O".

**Cleaning the lint filter:** Open door, pull lint filter up and out of machine and open it. Brush lint using a soft brush or your fingertips. Push lint filter firmly back into place.

**Please note:** Only use additives/plastic items specified as dryer safe and rinse items that have been treated with stain remover thoroughly in plenty of water before drying. Never dry rubber objects or objects stained with vegetable oils in the dryer.

Overview of programmes						Options			Approximate drying times (in minutes)	
Type of textile			Fabrics	Volume of load kg	Gentle 	Buzzer 	Start delay 	Very wet load	Wet load	
Programmes / Drying levels										
Cotton	 Ready to wear	Multi-layered, thick laundry such as: terry towels, dish cloths and dry towels, bed linen, underwear, terry towelling bath robes.	Cotton or linen hot wash / coloured laundry  Max. 7 kg	3.0 7.0	X	X	X	75' 150'	60' 120'	
	 Cupboard dry *	Similar types of laundry which do not require ironing such as: dry towels, bed linen, underwear, baby clothes, T-shirts, cotton socks.		3.0 7.0	X	X	X	70' 130'	50' 110'	
	 Iron dry *	Laundry which requires ironing such as: bed and table linen, dry towels, T-shirts, polo shirts, work clothes.		3.0 7.0	X	X	X	50' 110'	45' 90'	
Mixed fabrics	 Ready to wear	Laundry with thick, multi-layered areas such as: bed and table linen, track suits, anoraks, blankets.	Synthetic, mixed fibre or cotton easy care (ironing not required) laundry  Max. 3.5 kg	1.0 3.5	X	X	X	25' 65'	20' 45'	
	 Cupboard dry *	Laundry which does not require ironing such as: shirts, blouses, T-shirts, sportswear.		1.0 3.5	X	X	X	20' 50'	15' 45'	
	 Iron dry	Laundry which requires ironing such as: trousers, dresses, skirts, shirts, blouses.		1.0 3.5	X	X	X	15' 45'	10' 40'	
Delicate plus	 Cupboard dry	Low drying intensity for delicates and items labelled with  , such as: trousers, dresses, shirts, blouses.	Laundry made from synthetic fibres such as polyamide, nylon, polyacrylic, etc.  Max. 2.5 kg	2.5	X	X	-	60'	45'	
Airing	Laundry is aired and refreshed for 30 minutes without heating.			-	-	-	-	-	-	
Drying times	Completes drying (suitable for all fabrics).		 10' 20' 30' 40' 60' 90'	-	X	X	-	10' 20' 30' 40' 60' 90'		

\* Test programme in accordance with EN 61121.

## How to proceed if ...

**...you want to correctly care for and clean your dryer:**

**Clean the filter at the end of every cycle.**



- Open the door.
- Pull the filter upwards.
- Brush lint using a soft brush or your fingertips.
- Push the filter back into place.


**Please de-install once a year the air hose and remove the lint inside.**

**...you want to check the dryer yourself first:**

(If your machine is not functioning correctly, please check the following points before phoning for the customer service – also refer to relevant chapter in the instructions for use).

**Drying takes too long laundry is not dry enough.**



- Has the correct drying programme been selected?
- Was the inserted laundry too wet (washing machine spin speed less than 1000 rpm?)
- Is the lint filter dirty (filter indicator light on)?
- Is the room temperature too high?
- Are the "End" "End" and "Anti-crease" "  " indicator lamps lighting up? The drying cycle is complete and the laundry can be taken out.
- If the drying result does not meet your expectation, select a more dry programme.

**The dryer will not operate (after a power failure, always press the "Start (Pause)" button).**



- Is the plug properly inserted into the mains electricity socket?
- Is there a power failure?
- Has the fuse blown?
- Is the door properly closed?
- Has a drying programme been selected?
- Has the "Start (Pause)" button been pressed?
- Has the start delay option been selected?

**Lint filter indicator lamp on.**



- Is the lint filter clean?
- Is the vent hose blocked?
- Is the outside vent hose adaptor blocked?

### AFTER-SALES SERVICE

If the fault is still present once the above checks have been undertaken or should the fault occur for a second time, switch the machine off. Please contact your after-sales service representative (for more information, refer to the warranty manual).

Please have the following details ready when calling your after-sales service representative:

- The nature of the fault.
- The dryer type and model.
- The service code (the number after the word Service on the adhesive rating plate) on the right-hand side when the door is open.

**SERVICE** 0000 000 00000

 


Before using the machine, please also read the instructions for use carefully!

AWZ 3477

## Quick Reference Guide

GB

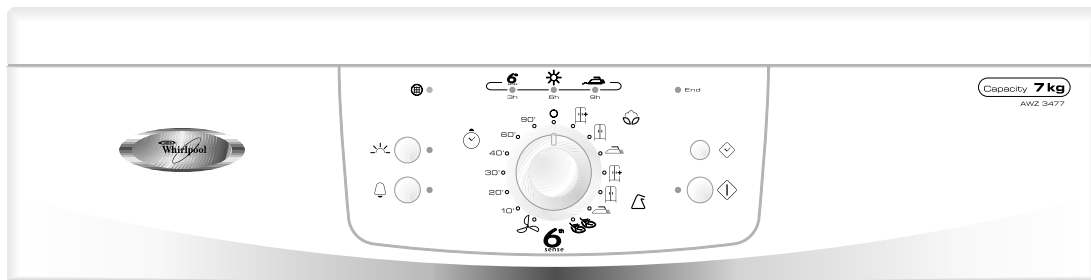

### Programme selector knob

 
The drying programme is selected by turning this knob.



### "Start (Pause)" button

The drying programme is started by pressing this button. The indicator lamp flashes during the selection phase and lights up during drying.

### Programme sequence

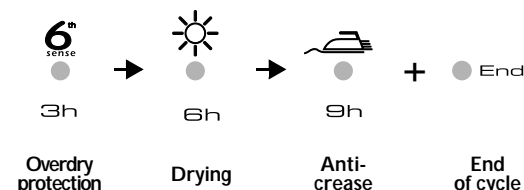

### Options

### Indicator lamps



#### Filter

The indicator lamp lights up when the filter and/or heat exchanger need cleaning. **Clean the filter at the end of every cycle.**



#### Overdry protection

The indicator lamp lights up when a humidity controlled program is selected, to indicate the working protection function. Function is not active in time controlled programmes 10', 20', 30', 40', 60', 90' and "Airing" "J".



#### Gentle

Reduces drying intensity (recommended for delicate items).



#### Buzzer

Signals/sounds end of drying cycle.



#### Delayed Start

Delays the start of the drying cycle by 1 to 9 hours.

Each time the button is pressed, the start time is delayed by 1 hour.

Then press the **"Start (Pause)"** button to confirm the final selection and to start the dryer.

The delayed start indicator lamp flashes and the countdown counts down in 1-hour intervals. The countdown is indicated by the indicator lamp above the button flashing. During the countdown, the drum will turn from time to time to re-distribute the laundry. To cancel or change the previously set time delay, set the programme selector knob to "O" or open the door.